



Application Examples


Low-speed transportation in a stock line

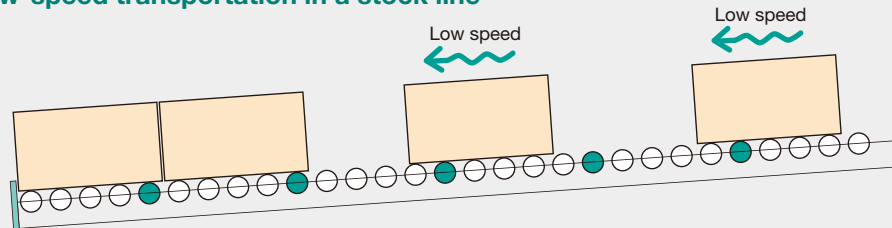

Separating a load from the others

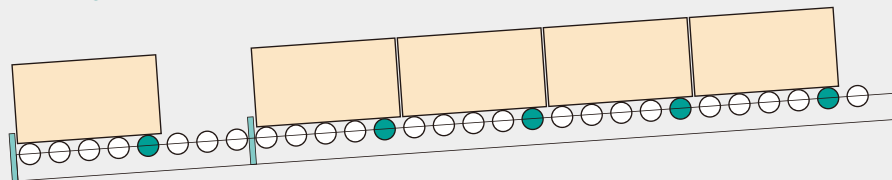

Preventing uncontrollable transportation

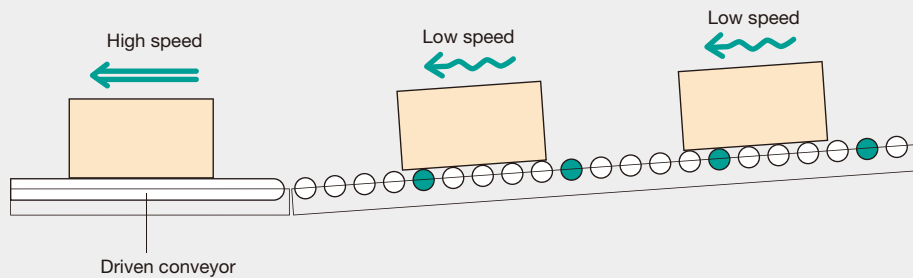

Speed reduction before a turnaround or a transfer machine

